



## Mounting instructions 10.5 inch A1Touch series

1. Draw the cut lines for the enclosure on the wall :

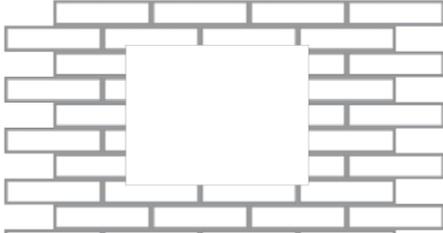


Dimensions of cutout in wall (WxHxD):  
10.5 inch Domo: 305x220x50 mm  
Cable input on bottom in middle !

2. Place Domo enclosure aligned in wall.

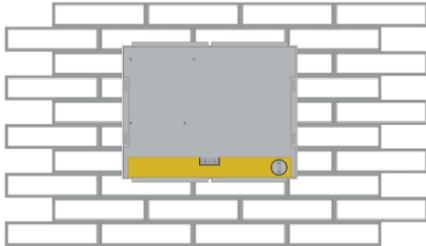

3. Screw enclosure in wall on left and right side with countersunk screws.

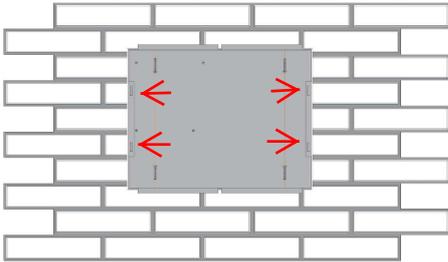

### CAUTION !

- Do not place PSU inside enclosure when there is no ventilation inside available.
- Finishing stucco on front of enclosure !

4. Push the panel pc in the enclosure until all magnets are secured (you hear a click). If the panel pc is not secured, then screw the M10 bolt counter clockwise until the correct height is achieved where magnet is securing panel pc.

